Reporting Form (F-01)

*Filter number: Same as Greek Atomic Energy Commission

13949

*Customer Number

Please include name and address of responsible analyst (if other than given or wrong).

Responsible Analyst:

Mr. CHRISTOS ATH. MARAMATHAS teleDOS LTD APOSTOLOU PAULOU 102 CORINTH CORINTHIA GR-20100 GREECE

E-mail: cmaramat[a.t.]teledos.eu

Tel: (+30) 6974867477 Fax: (+30) 2741084349

Name and Title: M	r. CHRISTOS ATH. MARAMATHAS
Laboratory / Division:	NUCLEAR TECHNOLOGY &
•	ENVIRONMENTAL LABORATORY
Organisation / Institute	: teleDOS LTD
Street / Number:	APOSTOLOU PAULOU / 102
City / Postal Code:	CORINTH / GR-20100
Country:	GREECE
Tel.:	(+30) 6974867477
Fax:	(+30) 2741084349
E-mail:	cmaramat[a.t.]teledos.eu
Signature:	
Collaborators:	Mr. JOHN SARRIS


Please send back to:

A. Shakhashiro IAEA Reference Materials Group Chemistry Unit, Agency's Laboratories Seibersdorf A-2444 Seibersdorf - Austria

Tel: + 43 1 2600 28226 Fax: + 43 1 2600 28222 Email: <u>aqcs@iaea.org</u>

Total Pages: 9

^{*} For trackability, kindly fill as in the hard copy sent with the sample

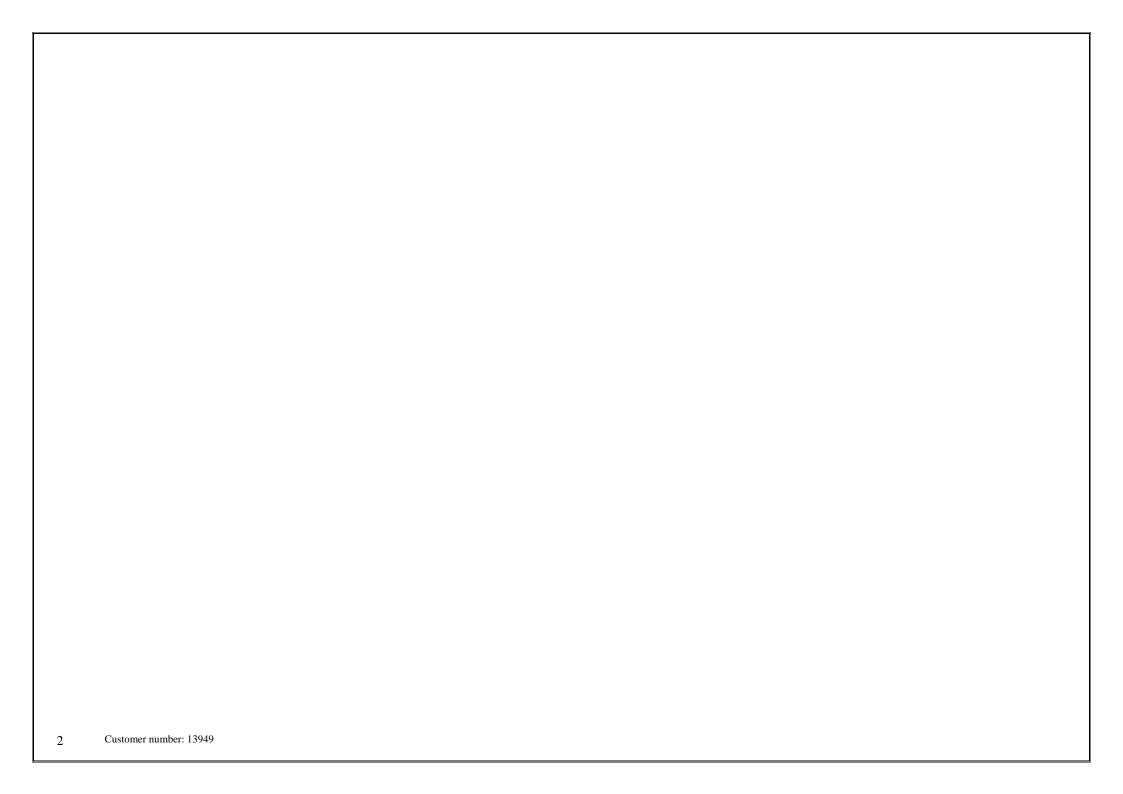

Results and Uncertainties Reporting Form (F-02)

BLANK AIR FILTER


*Filter number: Same as Greek Atomic Energy Commission

Nuclide	Unit		Ind	lividual Det	Your Estimates		Date of measurement			
		Value 1	Unc.1*	Value 2	Unc.2*	Value 3	Unc.3*	Average Value	Total Unc.* at 1σ level	(yyyy-mm-dd)
²⁴¹ Am	Bq/filter	< 0.01 = LLD		< 0.01 = LLD		< 0.01 = LLD		< 0.01 = LLD		2006-07-17
⁵⁷ Co	Bq/filter	0 (=LLD)		0 (=LLD)		0 (=LLD)		0 (=LLD)		2006-07-17
¹³⁴ Cs	Bq/filter	2.609E-03	1.637E-03	3.169E-03	1.404E-03	2.943E-03	1.320E-03	2.936E-03	8.29E-04	2006-07-17
¹³⁷ Cs	Bq/filter	0 (=LLD)		0 (=LLD)		0 (=LLD)		0 (=LLD)	-	2006-07-17
⁵⁴ Mn	Bq/filter	0 (=LLD)	-	0 (=LLD)	-	0 (=LLD)		0 (=LLD)	-	2006-07-17
⁶⁵ Zn	Bq/filter	< 0.02 = LLD		< 0.02 = LLD		< 0.02 = LLD		< 0.02 = LLD		2006-07-17
⁶⁰ Co	Bq/filter	2.117E-03	2.028E-03	2.274E-03	2.147E-03	2.303E-03	2.180E-03	2.226E-03	1.221E-03	2006-07-17
⁹⁰ Sr	Bq/filter	0 (=LLD)		0 (=LLD)		0 (=LLD)		0 (=LLD)		2006-07-17
²³⁹⁺²⁴⁰ Pu	Bq/filter	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	2006-07-17
²³⁴ U	Bq/filter	9.302E+00	3.720E+00	9.107E+00	3.579E+00	9.174E+00	3.670E+00	9.192E+00	2.110E+00	2006-07-17
²³⁸ U	Bq/filter	1.832E+00	2.13E-01	1.827E+00	2.13E-01	1.842E+00	2.19E-01	1.834E+00	1.24E-01	2006-07-17

^{*} Standard uncertainty of individual determination expressed in (Bq/filter) (see uncertainty quantification sheet)

^{**} Detection limit should be reported in the same units as results (Bq/filter)

^{***} All data should decay correct to 1st January, 2006.

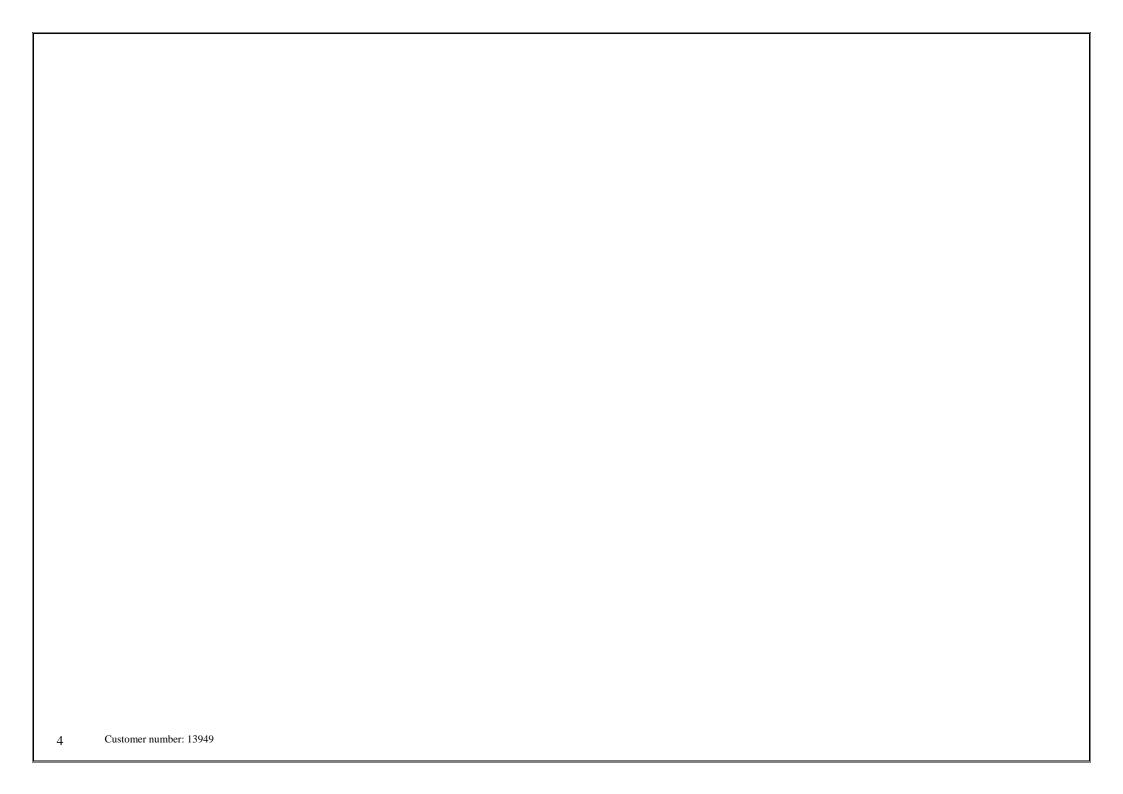

Results and Uncertainties Reporting Form (F-02)

SAMPLE AIR FILTER


*Filter number: Same as Greek Atomic Energy Commission

Nuclide	- Unit		Indi	vidual Det	terminat	Your Estimates		Date of measurement		
		Value 1	Unc.1*	Value 2	Unc.2*	Value 3	Unc.3*	Average Value	Total Unc.* at 1σ level	(yyyy-mm-dd)
²⁴¹ Am	Bq/filter	1.913E-01	2.86E-02	1.872E-01	3.00E-02	1.875E-01	3.04E-02	1.888E-01	1.71E-02	2006-07-25
⁵⁷ Co	Bq/filter	3.662E+00	3.23E-01	3.665E+00	3.24E-01	3.699E+00	3.70E-01	3.673E+00	1.95E-01	2006-07-25
¹³⁴ Cs	Bq/filter	2.524E+00	1.85E-01	2.525E+00	1.85E-01	2.375E+00	2.40E-01	2.490E+00	1.15E-01	2006-07-25
¹³⁷ Cs	Bq/filter	3.180E+00	2.45E-01	3.178E+00	2.45E-01	2.957E+00	2.58E-01	3.110E+00	1.44E-01	2006-07-25
⁵⁴ Mn	Bq/filter	3.097E+00	2.38E-01	3.094E+00	2.38E-01	3.099E+00	3.15E-01	3.096E+00	1.48E-01	2006-07-25
⁶⁵ Zn	Bq/filter	3.090E+00	2.42E-01	3.086E+00	2.41E-01	3.183E+00	3.20E-01	3.109E+00	1.51E-01	2006-07-25
⁶⁰ Co	Bq/filter	2.704E+00	2.00E-01	2.705E+00	2.00E-01	2.737E+00	2.18E-01	2.714E+00	1.19E-01	2006-07-25
⁹⁰ Sr	Bq/filter	0 (= LLD)		0 (= LLD)		0 (= LLD)		0 (= LLD)		2006-07-25
²³⁹⁺²⁴⁰ Pu	Bq/filter	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	2006-07-25
²³⁴ U	Bq/filter	0 (or < 5.07 = LLD)		0 (or < 5.18 = LLD)		0 (or < 5.23 = LLD)		0 (or < 5.16 = LLD)		2006-07-25
²³⁸ U	Bq/filter	2.870E-01	8.76E-02	2.775E-01	8.71E-02	2.823E-01	1.280E-01	2.822E-01	5.56E-02	2006-07-25

^{*} Standard uncertainty of individual determination expressed in (Bq/filter) (see uncertainty quantification sheet)

^{**} Detection limit should be reported in the same units as results (Bq/filter)

^{***} All data should decay correct to 1st January, 2006.

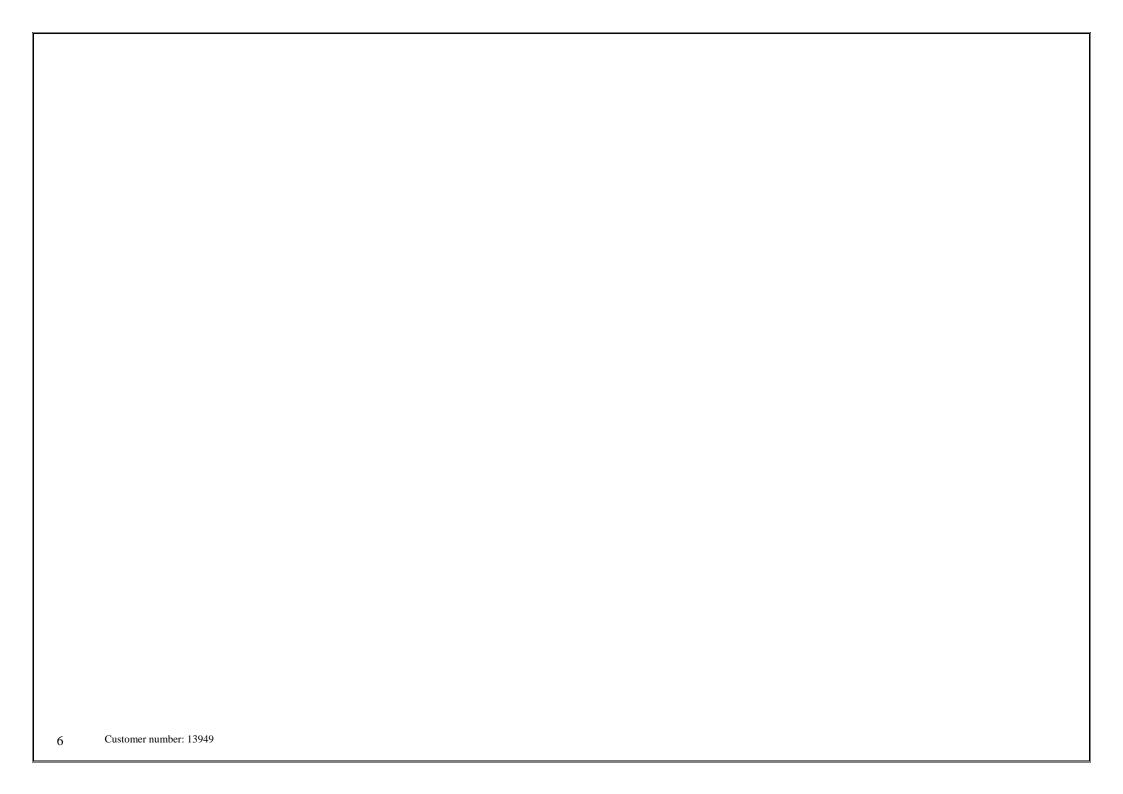

Method Validation and Combined Uncertainty Estimation Form (F-03)

Name of analyst(s): Mr. CHRISTOS ATH. MARAMATHAS Laboratory name: NUCLEAR TECHNOLOGY & ENVIRONMENTAL LABORATORY - teleDOS LTD
Please provide us with the following information related to method validation: 1- Did you perform method validation?
2- If yes, kindly submit the obtained validation parameters such as: Minimum detection limit, Repeatability limit, Reproducibility limit
3- Please describe your approach for evaluation of uncertainty components and give the formula used for calculation of the expanded uncertainty.
4- You are kindly asked to list the sources of uncertainties included in the estimation of the combined uncertainty.
5- Did your laboratory obtain a formal accreditation? Do you apply a QAS?

6- How many samples your laboratory analyze per year?

Remark:

In practice, there are many possible sources of uncertainty in a measurement, both, of random nature or manifested as bias, including:

- 1) reproducibility of measurement;
- 2) bias or drift of measurement;
- 3) uncertainty in calibration process; of blank; in instrument readings (e.g. peak integration)
- 4) uncertainties of calibration sources; in sample preparation (mass, dilution, etc.).

These sources of uncertainty are not necessarily independent and some may be combined in 1). Of course, these possible sources of uncertainty are not an exhaustive list. Individual standard uncertainties may be estimated from repeated observations (any valid statistical method for treating data) or by using all relevant information which may include previous measurement data, experience with or general knowledge of the behaviour and properties of relevant materials and instruments, manufacturers specifications, data provided in calibration and other certificates, and uncertainties assigned to reference data taken from handbooks.

Name of analyst(s): Mr. CHRISTOS ATH. MARAMATHAS

Laboratory name: NUCLEAR TECHNOLOGY & ENVIRONMENTAL LABORATORY - teleDOS LTD

Method and Quality Control Procedure Description Form (F-04) 1. DESCRIPTION OF SAMPLE PREPARATION AND DIGESTION METHOD (if applicable) Describe how the sample was prepared and presented to the apparatus (digestion method). 2. DESCRIPTION OF MEASUREMENT TECHNIQUE AND CALIBRATION METHOD Describe the efficiency and energy calibration procedure, what sources were used.

Use of blank, CRM, Control samples, duplicate, replicate, spike sample and control charts. Kindly report quality control data.

3. DESCRIPTION OF QUALITY CONTROL PROCEDURE